



WALLS

- Use horizontal materials and patterns to emphasize low, horizontal structures.
- Use vertical materials and patterns as accents in gables.
- Use timber structures, which usually have rounded, smooth logs as opposed to raw or split logs.
- Use wide, large-scale lap siding.
- Avoid synthetic products such as T-111 or fiberboard.

Appropriate wall elements:

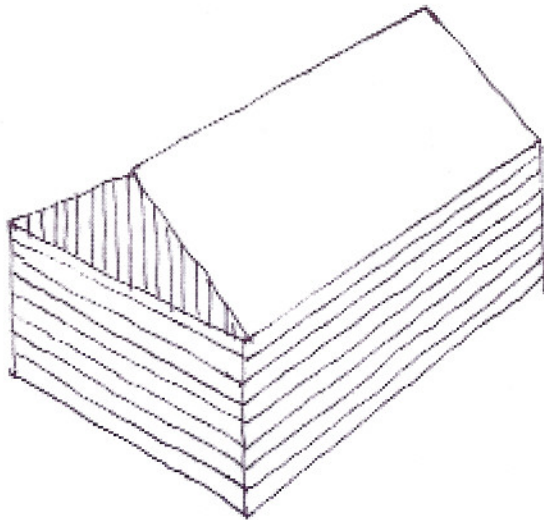


Vertical accent in gable
Horizontal siding

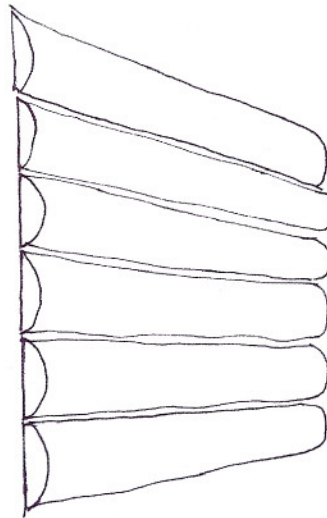

Rounded contours

Inappropriate wall elements:

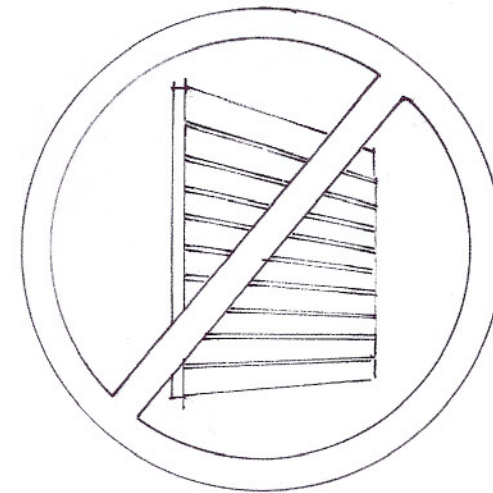

Overly refined products